

WHY CHOOSE POWERFLUE GAS HEATERS?

What Sets Cannon Powerflue Heaters Apart?

Always supplied with fresh air

Draw fresh air from outside the home to feed the fire so it delivers a cleaner source of heating.

No ventilation

No need for any wall/ceiling vent within the home.

Safe

Powerflue gas heaters are room sealed. Room air is not depleted from the living environment. Exhaust gases are drawn out safely through the flue and dispersed to outside atmosphere.

Multiple safety mechanisms

Enable heater to safely switch off should the need arise.

Higher efficiency rating

Due to additional heat exchanger and improved combustion process.

Flexible installation

Can flue up to 6 metres maximum vertical, sideways or under floor (15 metres for Latitude 1000,1500). Both Fitzroy and Canterbury Powerflue Heaters can penetrate through external wall and be concealed with a weather proof box.

Mock fireplace kit is included

 
No requirements for a zero clearance box when installed in a timber frame. (Not applicable to Latitude 1000,1500)

Fit into existing chimneys

Can be installed where applicable in chimneys using a flue extension kit. (Not applicable to Latitude 1000,1500)


Extended Flue Kit

Can be used in horizontal, vertical or under floor installation applications up to a maximum of 6 metres. For Latitude models, additional flue length is required.

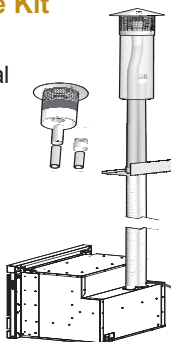

Weather Proof Box

 
Allows heater to be installed through an existing internal wall without the need to fabricate a mock fireplace inside the living area. (Not applicable to Latitude 1000,1500)

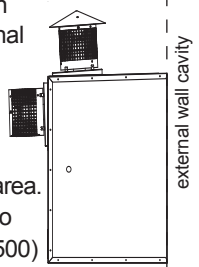

Openflue Heater Operation

Flue goes directly through the ceiling and roof.

 
- A** Inadequate ventilation and use of exhaust fans can deplete room air.
- B** Which can potentially draw carbon monoxide back into the living environment.

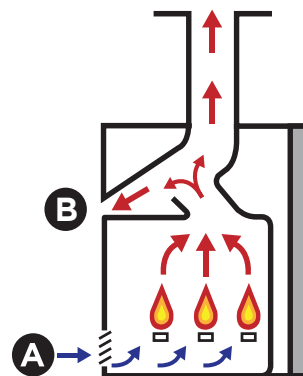


VS

Powerflue Heater Operation

 
- C** Fresh air is drawn in from outside for combustion via the air inlet.
- D** Exhaust gases are safely vented outside via the flue outlet.

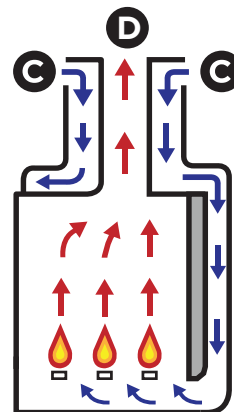


Powerflue Heater Installation Options

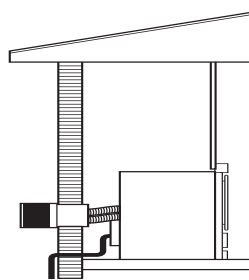 

 
1. Horizontal installation from the back.

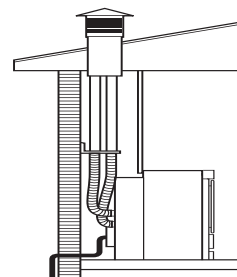

 2. Vertical installation.

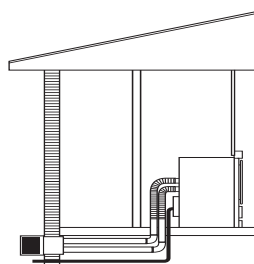

 3. Under floor installation.

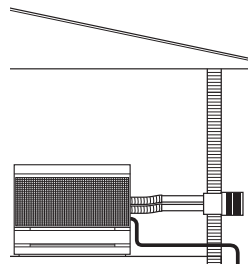

4. Sideways horizontal installation.